

ASK 13

Flight- and Maintenance Manual

ALEXANDER SCHLEICHER SECRLFLUGZEUGBAU POPPENHAUSEN /RHÖN

Flight - and Maintenance - Manual for the Glider
AS - K 13

Edition

| This | Handbo | ok | has | to | be | carried | on | | the oft. |
|------|--------|----|-----|-----|------|---------|----|--|-------------|
| It b | elongs | to | the | gli | lde: | | | | |
| | | | AS | j | (1 | 3 | | | |

| Serial | No | ***** | ***** | |
|--------|--------|-------|-------|------------|
| Manufa | cturer | **** | ***** | |
| ***** | | | ***** | ****** |

| Holder | **** | •••• | | ****** | **** |
|--------|------|------|-----|--------|------|
| ***** | | | ••• | ****** | |

AS - K 13 Flight Manual Amendments

| No. | Designation | Page | Date | Signature |
|-----|------------------------|-------------------------------|----------|------------|
| I | TM Nr. 4 | 22 | 5.12.69 | Schleicher |
| 2 | TN No. 5 (opt.) | 8 | 17.12.70 | Q-U. J-700 |
| 3 | TN No. 12 | annex | 04.10.89 | R.W. 5+00 |
| 4 | TN No. 14 | annex | 27.09.91 | R-W. J tow |
| 5 | Empty weight | Balancing sheet | 18.05.92 | EU. J.+00 |
| | | | | |
| | | | | |
| | | ger, and a special control of | | |
| | | | | |
| | | | | |
| | | - | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | <u> </u> | |

AS - K 13 Flight Manual

1. Operating Limitations

| 84.00 | |
|-------|---------|
| | speeds: |

| Air speeds: | | |
|----------------------------------|------|-----|
| Max * speed | 125 | mph |
| rough air | 87 | aph |
| aero tow | 87 | mph |
| auto and winch tow | 62 | mph |
| Weights: | | |
| Empty weight | 650 | lbs |
| Max. weight | 1060 | lbs |
| Max. weight of non lifting parts | 710 | lbs |
| Kategoryt | 5 BA | S |
| Limit load factor | | |

| up | | 4,0 |
|--------|--------|------|
| down | | -2,0 |
| Safety | factor | 2,0 |

Center of gravity position in flight:

Leveling means Tangente to rib Nr. 3

horisontal.

Datum wing leading edge rib 3

Max. forward 2,75 behind datum point

Max. rearward 9,7 " "

Weak link in the tow cable:

Winch tow max. 2350 lbs

min. 1850 lbs

Aero tow max. 1580 lbs

min. 1060 lbs

2. Operating Directions:

Winch tows

Max. tow speed is 62 mph.

Attention. In winch tow pulling the stick back means increase of speed. When lifting off ease the stick some what to overcome a light tentency to pitch up. Best attitude in climb is with stick normal. Winch tow on the belly hook only.

AS - K 13 Flight Manual

Aero tow

Max. towing speed is 87 mph.
For aero tow the nose hook is preferable.
Pull release till the stopy.

Before every take off check canopy and airbrakes for complete locking.


Adjustment of the front rudder pedals.

Pull back the pedals with the heels and lock the adjusting link to the desired position. Adjusting is possible during flight too.

In flight:

The presented values are calculated. They are related to EAS. There has to be considered the position error, see Fig. 1.

The indicated air speed reading may drop to zero when the glider is slipping or skidding due to movement of the total pressure peak from the nose to the side.

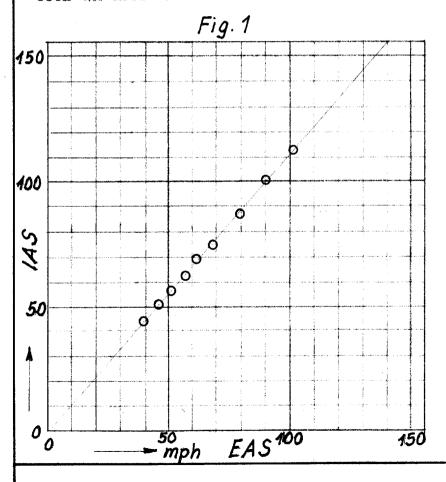

AS - K 13 Flight Manual

Stalling speed with an all up weight

of 840 lbs is 35 mph

1040 lbs is 38 mph

Speed at min sink 40 mph optim. glide 50 mph

Landings

Approach speed 50 - 55 mph.

The glide angle can be adjusted in a wide range with the mairbrakes. Touch down is best with partly extended airbrakes only. The wheel brake is actuated by the airbrake lever when fully pulled back.

Stelling and Spinning Behaviour:

With stick full back the aircraft can be controlled by the rudder. Applying a large amount of rudder will cause a spin. There has to be considered the influence of the center of gravity position to the spinning characteristics. With the C.of Cr. pos. forward the aircraft will tend to go into a spiral dive and build speed very rapidly. In this case the airbrakes have to be opened first before pulling out.

With C. of Gr well in the middle spinning is normal and the aircraft will recover by giving free the controlls allone.

With C.of. Gr. near the most rear ward position spin recovery has to be managed by the following standard methods:

- a) apply opposite rudder (i.e. against the direction of rotation of the spin);
- b) pause ;
- c) ease the control column forward until the rotation ceases
- d) centralise rudder and allow aircraft to dive out

At high speed there has to be watched the speed limits. When a speed of 87 mph is surpassed involuntary the airbrakes should be opened slowly.

Remember: At higher speeds the airbrake lever force is motuating in opening sense.

Rain drops, hear frost and ice will disturb the wing surface, so quite adverse flying characteristics may result. There fore caution is advised in such cases during approach, give enough speed margin.

Emergency Jethisoning of Canopy: To bail out the canopy has to be opened at the release knob at the left side and pushed forward out of the hinge.

The hinges have to be watched for easy moveability.*

Cloud flying

The glider has sufficient strength for cloud flying. Nevertheless some principal rules should be comsidered:

* TN-10.5 from 17.12.70:

"To bail out the canopy has to be opened by pulling both release knobs on left and right side."

AS - K 13 Flight Manual

- 1) Overspeed in cloud flying should be prevented in any case. There should be the rule to open the airbrakes early at speeds of 65 to 75 mph.
- 2) Minimum equipment for cloud flying:
 Air speed indicator with pitot tube protected
 against icing.
 Sensitiv altimeter
 Variemeter
 Compass
 Turn and bank (power source insensitive
 against icing).
 Chronometer
 An artificial horizon and accelerometer is
 recommended.
- 3) The ATC rules are to be observed.
- 4) Minimum Equipments

Airapeed indicator ranging from 30 to 125 mph. Altimeter

Safety belt and shoulder harness. Back cushion if no parachate is carried (min. thickness 4 inch).

Balance - and data plate Flight Manual.

5) Adjusting Data:

The adjusting and washout - angles as well as the control surface deflections are shown in the outline drawing.

At repairs care should be taken to observe the tolerances.

By the particular kinemetics of the control mechanism the aileron deflection will be influenced by the elevator. With normal stick position the ailerons have to be normal.

With pushed and pulled stick the ailerons are some what zoomed.

The controls have stops:

Rudder control: Fixed stop at the lower hinge.

Aileron control: Fixed stop at two hard wood pieces down the front seat.

Elevator control: Backward - fixed stop at the front edge of the seat, forward - fixed stop at the ground board.

Airbrakes:

Backward: Adjustable stop at the horizontal pushrod, stops against the main bulkhead frame. Forward:
Pixed stop, cross shaft lever stops at a tube piece.

After repairs, after installing of additional equipment, after new painting etc. there should be watched that the empty weight center of gravity is within the limits. If necessary balance weights are to be installed.

| Empty weight | 610 | 638 | 660 | 682 | 705 | lbs |
|---------------------|----------|----------|---------|------|------|-----|
| center of | Bax. 21 | ,45 21,c | 6 20,68 | 20,3 | 20,0 | |
| gravity position | min. 19, | ,3 18,7 | 18,2 | 17,7 | 17,2 | |

behind datum point.

Leveling means: Tangate to rib 3 horisontal.

Datum: wing leading edge rib 3.

AS - K 13 Flight Manual

If the empty weight center of gravity is within the given limits it is verified that the inflight center of gravity is correct provided the glider is properly loaded after the balance plate.

The center of gravity has an important effect to the gliders handling characteristics. Therefore one should pay attention to not exceed the given limits.

Too much backward position may become dangerous: Stalling and especially the spinning characteristics (flat spin) can be badly influenced. The elevator becomes more sensitive.

Too much forward position may deteriorate the performance and does not allow flying at maximum lift. (flare out when landing!).

The following ranges of flight position of. c.g. are tested:

- a) max. forward position:
 2.76 inches behind datum point.
- b) max. aft position:
 9,7 inches behind datum point.
- 6) Balancing instructions:

Cockpit load (Pilot + parachute).

single occup. from t seat 143 - 220 lbs.
two occup. from t seat 143 - 220 lbs.

Less load has to be completed with ballast on the seat (lead - or sand cushion).

Notice: If no parachute is carried a back cushion has to be used which has a compressed thickness of 4 inches.

Trim by weight

Fixing the 17 lbs standard trim weight at the forward foot board will compensate for 22 lbs pilot weight.

AS - K 13 Flight Manual

7) Approved Versions:

1) Riseings

- 1) Clean and grease bolts and holes.
- 2) First put in left wing from the side and put in rear bolt. Do not tilt fuselage.
- 3) Put in right wing as mentioned under 2.
- 4) Put in the topered pins (first the lower) and screw on the nut. By slight shaking the wing this can be done easier.
- 5) Secure the tapered pin with a safety needle. Secure the rear pins by the safety howks.
- 6) Connect the aileron and airbrake linkages and secure by the safety needles.
- 7) Put on elevator, the front screw has to be fastened by the wrench.

 There has to be watched that the bell crank is properly put into the pushrod counter part. There is the danger of bending the push rod.
- 8) After the elevator has been put ton the pushrod of the trim tab has to be connected to the tab bell crank by a pin, washer and safety pin. It is recommended to fix the push rod for transport.

2) Preflight Check

After rigging resp. daily befor the first flight:

Check all rigging connections for proper securing. Look for foreign bodies. Check the controls, airbrakes and the release hook for free movement.

It is recommended to check frequently the whole glider thoroughly. There have been found quite a lot of unsecured bolts and damage at such occasions. Use a flash light to look into every spot.

AS - K 13 Flight Manual

3) Derigging

Point ! - 8 (Rigging) in reverse sequence. Grease all joints, danger of rust !

4) Road Transport

The design of a trailer is a special task and can not been talked here in all details. The firm of Schleicher will supply suitable drawings for trailers.

The wing is best supported at the spar root.

The second support should have enough distance, best about 8 feet from wing tip. A sufficient wide aera at the supports is important.

The same considerations concerns to the fuselage. Fix points are the wheel, the fixing hole at the rear fuselage and the two welded in screw nuts on the side of the forward part of the fuselage.

Careful attention should be paid to prevent water coming into the interior of the wing and fuselage. The aileron and airbrake push rods in the fuselage should be fastened, best with a rubber strap.

5) Maintenance

Humity is the worst enemy of a wooden glider. Be careful to prevent water remaining in corners. On suspicion that water came into wings and fuselage, bring same into a dry room and turn every day. The glider is endemoted especially on open trailers. In any case it must be taken care for that by covering the front part no splash water will touch the wing root.

Also by condensing water considerable quantities of humidity can enter the interior of the glider.

Strong sun irradiation will affect the finish by time, therefore the glider should not be exposed to the sun more than necessary. The treatment of the finish with good waxes and polishing material will increase the dumability and improve the surface, an important fact for performance. The advantages of the laminarprofil can only be achieved by a smooth surface.

Sealing of gaps with adhesive tape will also cause some gain of performance. However at the cockpit caution is necessary, when parachute bail out shall be possible.

Cleaning of the plexigles canopy only with suitable cleaners. If not available use pure water. Soft cloth (gloves cloth). In no case rub with hard cloth dry on plexigless.

Lubrication of bearings:

So far as possible, the ball bearings are covered and therefore need no special mainte nance. Only the bearings at the wing root, where the rigging connections do not allow a suitable protection, must be cleaned with gasoline when dirty and greated again.

The control surface bearings are to be dismantled and greased at the annual overhauls.

Wheel: Tube pressure 35 psi.

The c.g. hook especially is exposed to dirt and needs often chaning and oiling.

AS - K 13 Flight Manual

The tail skid shoe has to be soled from time to time by welding on a new steel plate. But it should be removed for this work to prevent annealing the spring.

The pressure openings for the instruments at the fuselage are to be sealed with adhesive tape on transport or extended parking. During longer non-flying periods it is advisable to put the in - struments completely out and store it in a dry room. When installing again watch correct commecting of the tubes.

The safety belts are to be checked currently for fractures, desp-stain and corrosion.

6) Overheuls

The tow heek has to be removed every 2000 launches or 2 years and sent back to the manufacturer for overhaul.


The rudder cables are to be replaced if there are any signs of worth mentioning wear.

7) Repairs

All major repairs should be made in the manufacturing firm. In cases of doubt please ask the Schleicher firm.


8) Appendix


3 - View drawing Belancing sheet.

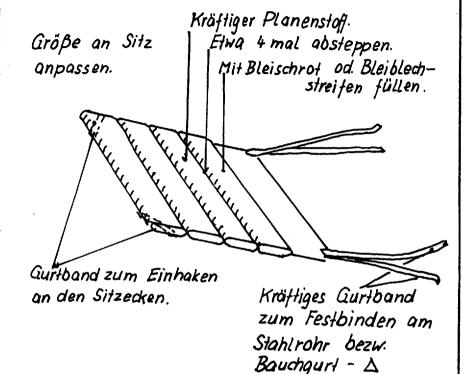


2.11 Anlagen


- 1. Übersichtsblatt
- 2. Wägungsblatt
- 3. Schmierplan
- 4. Montageanweisung Höhenleitwerk

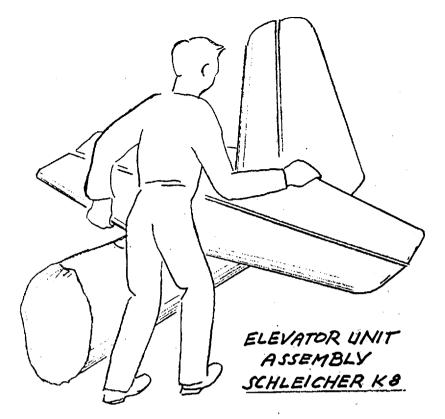


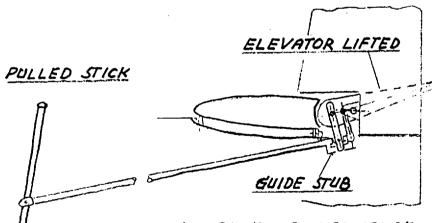

WHEN SLIDING IN THE REAR EYEBOLTS OF
THE STABILIZER IT IS ADVISABLE TO LIFT THE
ELEVATOR SOMEWHAT. THE BALL BEARING OF THE
ELEVATOR CONTROL LEVER MUST FIT INTO THE GUIDE
STUB OF THE PUSH-PULL TUBE TO AVOID THE RISK
OF BENDING THE TUBE.

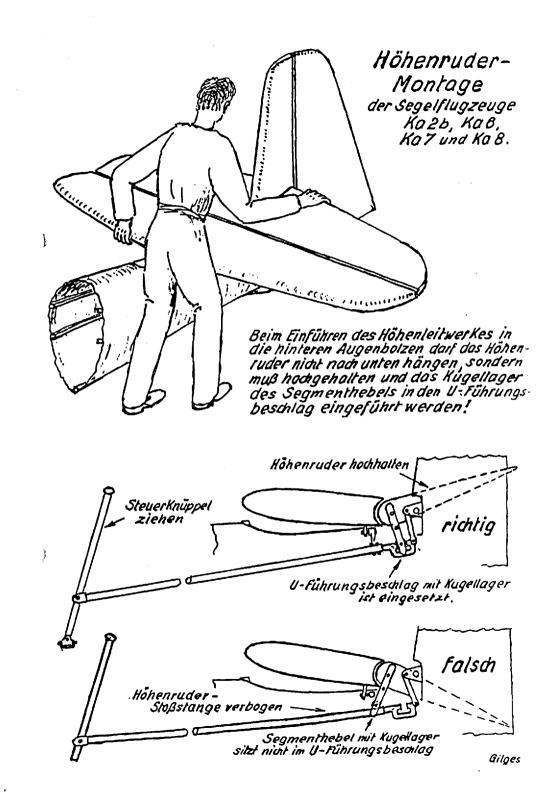

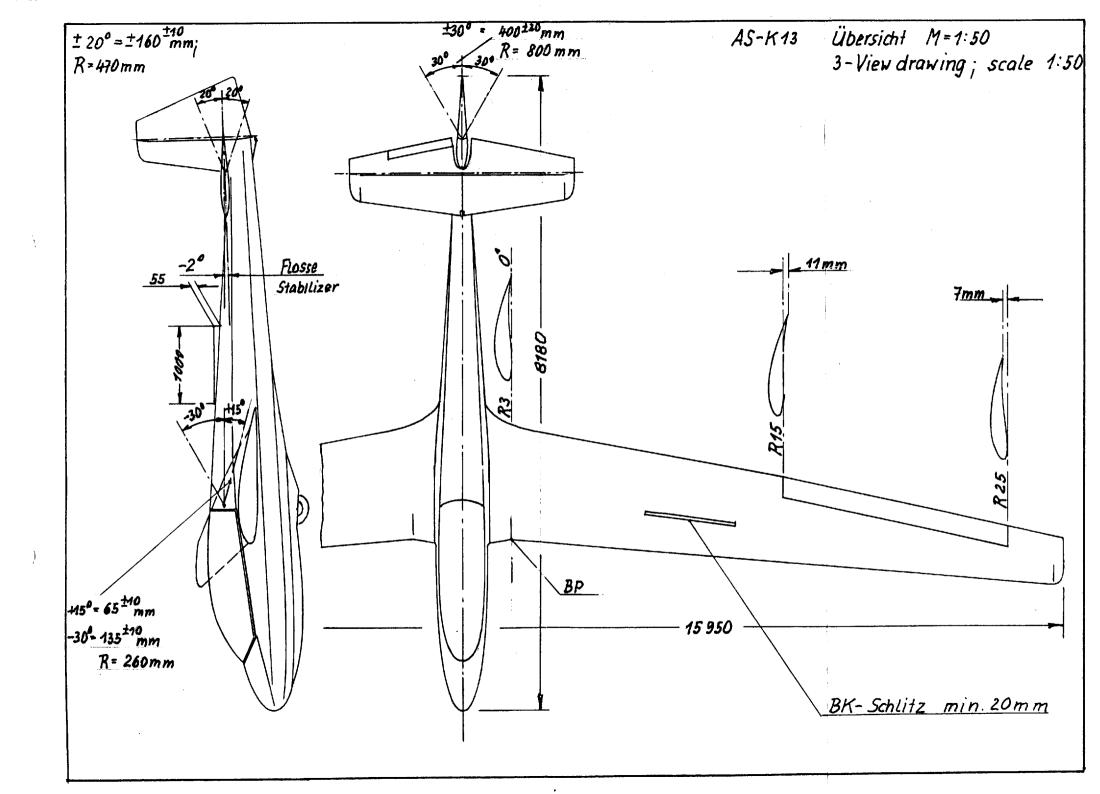

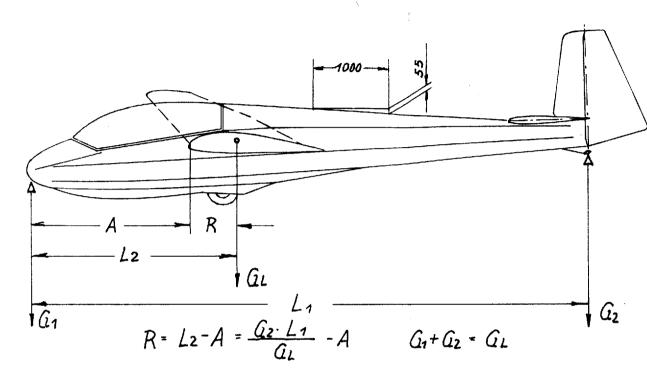

GL = Leergewicht; empty weight.
G1 = Gewicht am vonderen Auflagepunkt
weight at the front support.
G2 = Sporngewicht; weight at tail skid.


R = Schwerpunkt rücklage.
center of gravity position.

| GL= Leergewicht; empty weight | 280 | 290 | 300 | 310 | 320 | kp | 330 ** 340* |
|--|-------|-----|-----|-----|-----|-----|------------------------|
| R S Vorderste Schwerpunktlage; most forward position of C.of. Gr. empty min. | 490 | 475 | 462 | 449 | 437 | m m | 426 415 |
| Hinterste Schwerpunktlage: most rearward position of Cof. Gr. empty max. | E1. F | 535 | 525 | 516 | 508 | mm | 499 492 |

erweitert 18.05.92

Lighten the sailplane as much as possible. Otherwise max. payload too low for a double seater!

^{*} Flugzeug möglichst erleichtern, mögliche Gesamt-Zuladung sonst zu gering für einen Doppelsitzer!

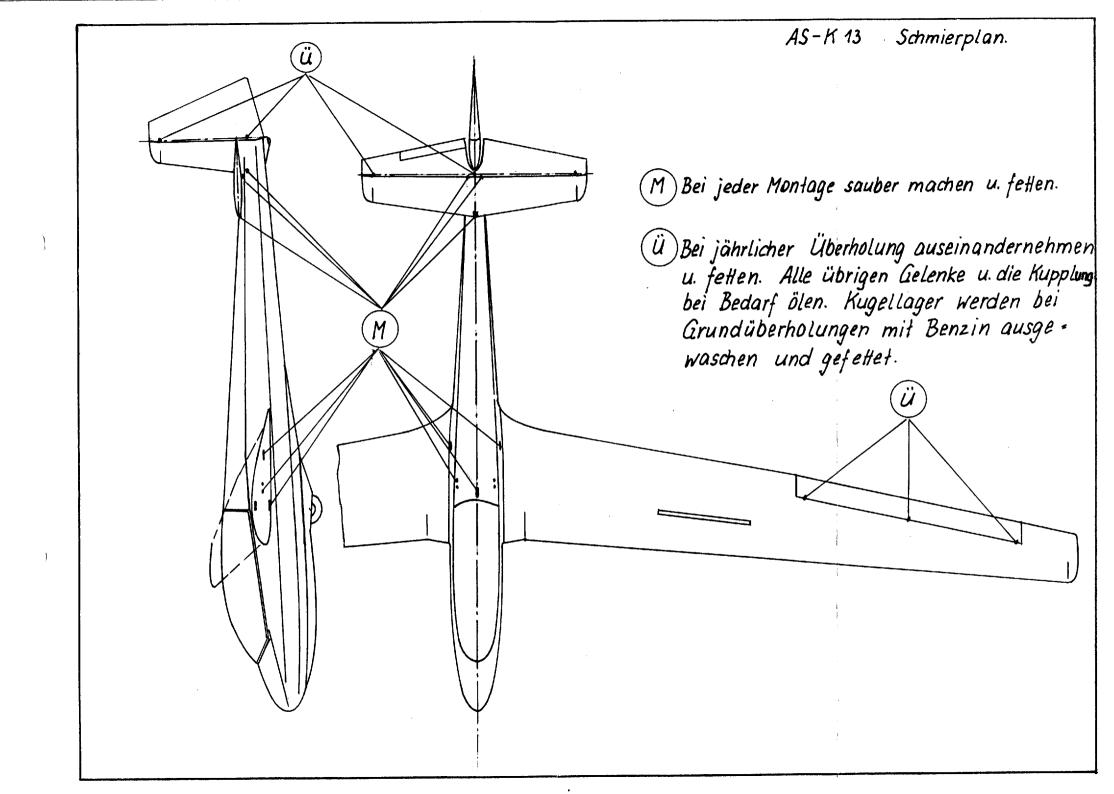

Semiaerobatics:

Besides spins the following aerobatic maneuvres may be executed:

Loops

Stall turns

Lazy eights

Loop: Speed of entry 90 to 100 mph.

Stall turn: Speed of entry 100 to 110 mph.
During climb at approx. 60 mph

there has to be applied full rudder and slightly opposite

aileron.

Lazy eight: Speed at the crossing point 90 to 100 mph.

| | SHEET: 1 of 3 | Technical Note for | Alexander Schleicher GmbH & Co. Segelflugzeugbau D-6416 Poppenhausen |
|---|------------------------------|---|--|
| | Glider model: | Ka 2 u. Ka 2B | TN-No. 11 TN-No. 21 TN-No. 18 TN-No. 23 TN-No. 1 TN-No. 1 TN-No. 1 TN-No. 6 |
| Wetergabe sowe Verweldingung deser Unter Zuwderhandlungen verplichten zu Schadener- lage Verwerung und Mittelung äres Inhalis nicht satz Ale Rechte für der Fall der Pateriterteung gestaltet, sowert mich ausdrucklich zugestanden oder Gebrauchsmuster-Enfragung vorbehalten | Serial number applicability: | Ka 2B, Data-Sheet No. 203, all Ka 6, Data-Sheet No. 205, all Ka 6/0, Data-Sheet No. 205, all Ka 6B, Data-Sheet No. 205, all Ka 6BR, Data-Sheet No. 205, all Ka 6CR, Data-Sheet No. 205, all Ka 6CR, Data-Sheet No. 205, all Ka 6BS, Data-Sheet No. 205a, ser K7, Data-Sheet No. 211, all K8, Data-Sheet No. 216, all K8B, Data-Sheet No. 216, all K8C, Data-Sheet No. 216, all K9, Data-Sheet No. 221, ser K11, Data-Sheet No. 668, ser ASK 13, Data-Sheet No. 267, all | serial no.s serial no.s serial no.s serial no.s ial no. 1 ial no. V1 serial no.s serial no.s |
| Vervielfalligun id Mittelung ihr ht ausdrucklic | Subject: | Elevator. | |
| gabe sowie irwertung un et, soweit no | Compliance: | Prior to the next take-off. | |
| Weiters lage Ve gestaft | Reason: | A glider of the model K7 failed titude immediately after tow launch. With the stick full ba could be actuated in the correc elevator deflected downwards. loose glue bond at the elevator rator fitting is attached. Simil before to the issue of the LTA 72 | rope release on winch ck only the left elevator t direction; the right The reason for this was a ib 1 at which the elevar incidents lead already |
| | Action: | 1. Remove elevator. Check that the glued joint bet ing edge plywood and the elev in good condition (see Fig.1). whether the LTA 72-7 of Feb viously accomplished (this is K11 and ASK 18); if yes th carefully has to be detached i check the glued joint. | ator spar respectively is Before doing so check .9, 1972 was already pre- not applicable to K9, en the fabric strip first |

Technical Note Alexander Schleicher SHEET: for 2 of 3 Segelflugzeugbau Glider Models as per Sheet 1 D-6416 Poppenhausen Fig.1 Fabric strip approx. 30 mm wide Rib 1 Check this glued joint! 2. If you find a defective glued joint, the rib no.1 has to be removed and re-glued. It is advisable to exchange at the same time also the first sector of the nose plywood. To give a better protection from moisture, a fabric strip (about 30 mm wide) must be glued around the edge of the elevator nose and rib 1 (as shown in Fig.1). 3. The above action under points 1. and 2. must be repeated every three years during the annual re-inspection. This copy of the Technical Note must be inserted in the Flight and Operations Manual of the respective glider as an annex and a corresponding entry must be made into the "Amendments to the Manual". Material & Rib 1 made from multi-plywood, 15 m thick, and nose plydrawings: wood, 1 mm thick, according to DIN L 182/183, class 1/2 or NL 9128, 6.1013. Drawing as above. It is not necessary to redetermine the mass and C.G. Mass and C.G.: data.

ب

| SHEET: 3 of 3 | Technical Mote for Glider Models as per Sheet 1 | Alexander Schleicher GmbH & Co. Segelflugzeugbau D-6416 Poppenhausen |
|------------------|---|---|
|------------------|---|---|

Notes:

Actions 1. and 3. can be accomplished by a person who is familiar with such work.

Action 2. must only be accomplished by a technical aviation service station holding an appropriate license; the accomplishment of all actions must be certified by a licensed aviation inspector in the glider logbook and in the inspection certificates.

Poppenhausen, October 4, 1989

ALEXANDER SCHLEICHER
GmbH & Co.

.A. fute-li.

The German original of this Technical Note has been approved by the LBA under the date of Oct.17, 1989 (signature: FRIESS). The translation into English has been done by best knowledge and judgement; in any case of doubt the German original is controlling.

Weitergobe sowie Vervielfalligung loge, Verwertung und Mittellung ihra gestläte sowed och ausgebingen eine

AIRWORTHINESS DIRECTIVE

72-7/3 Schleicher

```
Date of issue:
1 3. Dez. 1989
Affected Sailplane:
German Type Certificate
No. 140.
              Ka 2.
                             all serial nos.
     203.
              Ka 2B.
                             all serial nos.
     205.
              Ка б.
                             all serial nos.
     205.
              Ka 6/0.
                             all serial nos.
     205.
              Ка 6В.
                             all serial nos.
     205.
              Ka 6BR.
                             all serial nos.
     205.
                             all serial nos.
              Ka 6CR.
     205a.
              Ka 6BS.
                                 serial no. E1
     211,
              K7,
                             all serial nos.
     216.
              КΘ,
                             all serial nos.
     216.
              KSB
                             all serial nos.
     216.
              K8C.
                             all serial nos.
              к9.
                                 serial nos. 1
     221,
     668
              к11.
                                 serial No. V1
     267
              ASK 13.
                             all serial nos.
                             all serial nos.
     307.
              ASK 18.
              ASK 18B.
                             all serial nos.
```

Subject: Elevator

Reason:

Loose glue joints on rip 1 of the elevator

Action:

In accordance with the respektive Technical Note

Compliance:

Before the next start

which become herewith part of this AD and may be obtained from Messrs.

Alexander Schleicher GmbH & Co. Segelflugzeugbau,

D-6416 Poppenhausen, Wasserkuppe, Federal Republic of Germany

Accomplishment and log book entry:

Action 1 and 3 to be accomplished by a skilled person.
Action 2 to be accomplished by an approved service station.

The accomplishment of this AD must be certified by a licensed inspector in the powered gliders inspection documents and in the log-book.

Note:

This Airworthiness Directive replaces AD-No. 72-7/2 of August 24, 1989.

| Zuwiderhandlungen verpflichten zu Schod, sotz. Alte Rechte für den Fall der Patenterteilung oder Gebrauchsmuster-Eintragung vorbehalten | |
|---|--|
| Zowid satz / | |


| | 1 | Alexander Schleicher |
|----------------|---|---|
| 1 of 2 | Technical Note | GmbH & Co. |
| | No. 14 | Segelflugzeugbau D-6416 Poppenhausen |
| Subject: | Inspecting the bearing brac the airbrake control circuit. | kets and the toggle force of |
| | | |
| Serial number | Glider ASK 13, Data Sheet no.2 | 67 |
| applicability: | A) Serial no.s 13000 thru 136 B) All serial no.s. | |
| Compliance: | at the latest. | before or on March 31, 1992, |
| | B) The action must become pa C. of A. inspection. | rt of each future annual |
| Reason: | On some gliders of the model of the airbrake control circui root rib. The failure was forces which resulted from a toggle in the airbrake control | t have broken at the wing caused by too high toggle wrong adjustment of the |
| Action: | as the root ribs themse In case of doubt the paint bracket. In most cases bottom of the front beari drawing on Sheet 2 of this Where damages at one bea | he wing root ribs as well lives for damage, cracks etc. must be removed off the the breaks were found at the ng bracket; refer to the |
| | Check the toggle force and where necessary adjust | as described under Point 3.) |
| | 3. Adjustment Instructions Fo | r Airbrake Toggle |
| | 3.1 Undo the airbrake return s ing lever in the cockpit. | pring at the front operat- |
| | obtained at the front a measured from above (meas | ch side separately - must be of approx. 3 to 4 daN is irbrake operating lever when turement distance from the ating lever towards the hand |
| | correct adjustment values | eads in the fuselage. If the cannot be achieved here, brake stop blocks inside the |

| <u>м</u> |
|----------|
| |

ASK 13 Technical Note No. 14

Alexander Schleicher GmbH & Co. Segelflugzeugbau D-6416 Poppenhausen

- 3.4 Take care that the toggle must not go over the dead point which would cause the airbrakes to extend again.
- 3.5 For both airbrakes together, the hand forces must not exceed approx. 6 daN, when measured at the front airbrake operating lever from above.
- 3.6 Re-fit the airbrake return spring at the front operating lever in the cockpit.
- 4. This Technical Note must be inserted as appendix into the ASK 13 Flight and Maintenance Manual and this action must be entered into the "Amendments" on page 2.
- 5. The inspection of the bearing brackets and of the toggle force of the airbrake control circuit (as described under points 1. thru 3.) must be included from now on within each annual C. of A. inspection.

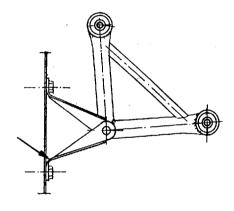

The actions under Point 1.) thru 3.) can be accomplished by any competent person. The accomplishment of this mod must be certified by a licensed aviation inspector in the glider's inspection documents and in the log-book. The action under Point 4.) can be accomplished by the owner / operator of the glider himself.

Poppenhausen, September 27, 1991

ALEXANDER SCHLEICHER

GmbH & Co.

i.A. linh W.

Lutz-Werner Bumtow.

The German original of this Technical Note has been approved by the LBA under the date of October 10, 1991 (signature: SKOV). The translation into English has been done by best knowledge and judgement; in any case of doubt the German original is controlling.